

# **ONE YEAR WARRANTY**

AllerAir units in this series are covered by one-year warranty against defects in materials and workmanship for a period of one year from the date of purchase. **Warranties are limited to the original purchaser and are thus non-transferrable.** 

Units must be shipped back to AllerAir in their original packaging. Clients are responsible for insuring packages with carriers such as UPS.

The warranty does not cover expendable parts such as filters and pre-filters.


AllerAir Industries Inc. is not liable for any consequential damages for breach of this or any other warranty expressed or implied whatsoever.

One year parts and labor.

AllerAir top quality air purification machines are distributed worldwide for commercial, residential, institutional and industrial use. The units employ cutting-edge technology, and are built according to the highest standards required for health and safety.



# **Operation and Maintenance Manual**

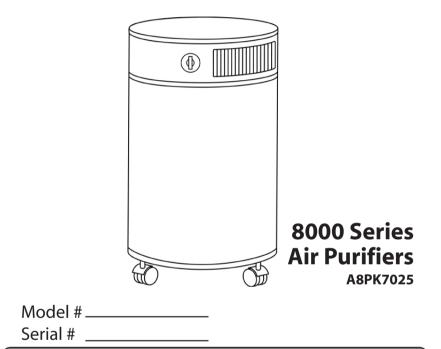

**Congratulations!** You're moments away from fresher, cleaner indoor air. Your new AllerAir unit will combat many of the chemicals, gases, odors and particles responsible for poor indoor air quality (IAQ). Poor IAQ may cause or worsen allergies, asthma, multiple chemical sensitivities (MCS) and sick building syndrome. We recommend proper maintenance of your unit to keep it running efficiently for years to come.

### **Operation:**

All units **except** D and DX models are shipped fully assembled and ready for use. (D and DX model owners may refer to their additional instruction sheet for filter installation, or refer to Page 3 of this booklet.)

**NOTE:** As original packaging is required for warranty returns, new AllerAir owners are advised to keep boxes and shipping materials.

AllerAir Industries Inc. Toll free: 1-888-852-8247 / Fax: 1-877-688-2193 www.allerair.com






### **GETTING STARTED**

- Keep packaging in case of warranty returns
- Filters are shipped in a separate box, and must be installed prior to use. Refer to Page 3.
- Wipe the unit with a soft damp cloth to remove dust accumulated during shipping
- Check the inlet opening for extra prefilters if ordered
- Lav the unit on its casters and plug it into a 120-volt outlet with ground
- Run the unit on TURBO for a few minutes to re-adjust the airflow patterns in the room
- Depending on interior conditions, you may choose to run the unit on HIGH during the day and on LOW at night\*
- Running the unit on LOW is energy-efficient and increases the amount of air dwell time in the cleansing chambers

\* Depending on interior dust conditions. But for chemical, smoke or VOC odors we suggest operating on the low setting to allow for the longest dwell time and adsorption.

# **REPLACING OR CLEANING THE PRE-FILTER**

We recommend changing or cleaning pre-filters every one to two months.

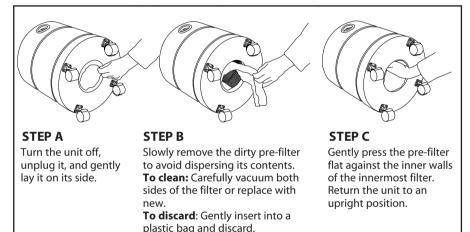

### [Warning]

Refrain from poking or sticking any object into the unit's air vents

### Pre-filter Order Reference Numbers\*

To order a new pre-filter, call AllerAir toll-free at 1-888-852-8247 during regular business hours (EST), or send an e-mail to info@allerair.com

Models	Prefilters	8000	8000 HEPA only
Exec, Vocarb	Poly Prefilters	A8FMP006	Prefilter A8FMPH18
DS Models	Tacky Prefilters		
MCS Models	Cotton Prefilters		

\*Please use the above part numbers when ordering your replacement parts

### THE ALLERAIR AIR FILTRATION SYSTEM

### ACTIVATED CARBON

Your AllerAir air purifier contains activated carbon that permanently traps dangerous airborne chemicals, gases and odors. This vital filter should be changed approximately every two to three years, depending on the environment in which the unit is operating. You can also upgrade your Exec, Vocarb or D unit at any time to accommodate a larger and deeper carbon filter suitable for removing heavier concentrations of chemicals, gases and odors.

### PRE-FILTER

The pre-filter included with your unit removes larger particles and helps prolong the life of your HEPA filter. The pre-filer should be vacuumed or replaced every three months.

#### LASER TESTED. MEDICAL-GRADE HEPA\*

HEPA or high-efficiency particulate air filters were originally developed by the military to remove radioactive dust, and are now the primary particle filtration systems used in hospitals, laboratories, electronic clean rooms and any application where clean air is critical. Today, HEPA filters are widely recommended by allergists, doctors and indoor air quality experts for home and office. They trap an amazing 99.97% of airborne particles at 0.3 microns, including dust, hair, pollen and even some bacteria and viruses. Depending on the particle level in the environment in which the unit is used, your HEPA filter should be replaced every three to five years.

\* Note that chemical and odor models D and DX feature a micro-particle filter which is rated to trap at least 95% airborne particles.

### THE ALLERAIR ADVANTAGE

• Our units offer complete air filtration removing airborne chemicals, gases, odors and particles.

· Our deep bed, activated carbon filters last longer than the average thin filter which is generally carbon spraved onto a synthetic material. · Our units do not use dangerous ozone technology

· Our units are manufactured to clean your air and therefore are not made with a plastic housing, or other materials which may off-gas chemicals.

· Our units are powered by American-made motors that are energy efficient and cost only pennies a day to operate.

### **IMPORTANT NOTICE**

#### PLANNING ON PAINTING YOUR HOME? READ THIS FIRST:

Particles from paint may clog your HEPA filter, therefore we recommended that users unplug their units and remove the HEPA filter, storing it off-site until the paint job is complete. Due to the serious toxic nature of paint it is also recommended that your carbon filter be replaced or refilled in the weeks after the paint job is complete.


See, Replacing HEPA and/or carbon filters, for instructions on how





### **REPLACING UV BULB AND BALLAST**

### NOTE: BEFORE PERFORMING ANY SERVICE ALWAYS UNPLUG UNIT FROM POWER SOURCE.

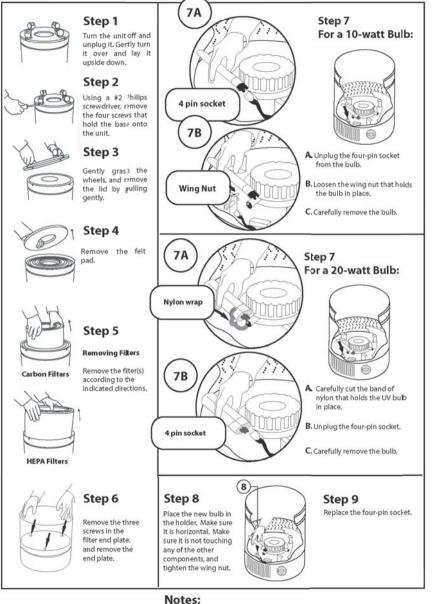

Replace the filter end plate. Replace the screws, filter(s) and bottom with the 4 screws.



REPLACING HEPA AND/OR CARBON FILTERS

# STEP 1

Make sure the unit is set to "off" and the unit is unplugged. Lav the unit upside down, so that the wheels face up.



STEP 4 Reach inside the unit, and remove felt pad.



STEP 7 Now, replace the new HEPA filter into the unit.



Replace the base, making sure the arrow on the gold sticker lines up with unit's rear seam.



# STEP 2 Using a #2 Philips screwdriver,

remove the four screws that hold the base onto the unit.




### STEP 5 First, remove the carbon filter. (pull up gently by placing thumbs on the inner side of the filter)



STEP 8 Then, replace the new carbon filter into the unit.

See page 5 for instructions on replacing carbon filling.



Step 11 Replace the four screws.



STEP 3 Grasp the wheels. Remove the base by pulling gently on the wheels



STEP 6 Then, remove the HEPA filter with the same technique.



Step 9 Put back the felt pad removed in STEP 4.



Step 12 Turn the unit back onto its wheels. It is now ready for use.

3

6





# **HEPA & CARBON FILTERS ORDER GUIDE**

These replacement filters will extend the life of your AllerAir unit. Please be sure to follow the instructions for changing the filters in your unit.

We recommend changing pre-filters every two months, HEPA filters every three to five years, and carbon filters every two years.

# **Order Reference Numbers**

Please use the numbers in the chart when placing your order. Call AllerAir at 1-888-852-8247 during regular business hours (EST) or send an e-mail to info@allerair.com

### **HEPA Filter Order Guide**

Models	8000	
Exec, Vocarb	A8FH0411	

NOTE: Please use the above part numbers when ordering your replacement parts

# Microparticulate Electrostatic Filter Order Guide

Models	8000	
D Models		
DX Models	A8FMR002	
DS Models		

**NOTE:** Please use the above part numbers when ordering your replacement parts This is the filter that wraps around any D, DX, DS or MCS carbon filter.

### **Replacement Carbon Filter Order Guide\***

Models	8000
Exec Models 2.5"**	A8FCB325
Vocarb Models 2.5"**	A8FCB225
D Exec Models 3"	A8FCB330
D Vocarb Models 3"	A8FCB230
DX Exec Models 3.5"	A8FCB335
DX Vocarb Models 3.5"	A8FCB235
DS Models 3"	

\*Please use the above part numbers when ordering your replacement parts. If you have ordered a special blend of carbon in the past please let us know about it when ordering the replacement

\*\*Please refer to your carbon filter depth when ordering a replacement

### **REFILING THE CARBON CANISTER**

Your AllerAir unit contains two filters. The carbon filter is the smaller, innermost one. **Tools required:** 

Philips screwdriver, garbage bag large enough to hold all of the old carbon, rubber r

### \* Please note that this is a messy, dust-producing job, so select attire and site for the task accordingly.

AllerAir makes a special funnel to evenly refill carbon filters.

Call 1-888-852-8247 during regular business hours (EST) or e-mail to order.





When the filter is full, replace the lid

and its screws. Adjust the pre-filter,

and gently slide the filter back into

### STEP 2

the lid of the filter.

STEP 5

the unit.



TEP 4

STEP 1

Pour in the new carbon, using a funnel if desired. As you pour, tap the sides of the filter with the rubber mallet to help settle the carbon granules.

# **Order Reference Numbers**


# Empty Carbon Canisters Order Guide\*

Models	8000	Notes	
2.5" Canister**	A8FC1501	Exec and Vocarb models	
D Models	A8FC0503		
DX Models	A8FC1503		

\*Please use the above part numbers when ordering your replacement parts. \*Please consult the Bulk Carbon Order Guide \*Please refer to your carbon filter depth when ordering a replacement

### Bulk Carbon Order Guide\*

D					
	Models	4000	Notes		
	Exec Mix	AM000911			
	Vocarb Mix	AM000912			
	Tobacco Smoke Mi	AM000901			
	Special Blend Mix		please call		





### STEP 3

Discard all of the old carbon. Pour it into a garbage bag of adequate size and tie the bag shut.



STEP 6

Replace the felt gasket. Replace the base of the unit. Align the arrow on the base's gold sticker with the unit's seam, and replace the four screws with a Philips screwdriver.